

## N3135 Regulator Single and Dual Voltage **Applications**

**Installation Instructions** 

**CAUTION** 

This symbol is used to indicate presence of hazards that can cause minor property damage.

## N3135 Regulator in Single Voltage (28 V) Applications

CAUTION 14 V output will not be present if installed on a single voltage application.

When the N1225-1 and the N1505-1 alternators are used in single voltage applications, the alternator phase cable MUST be attached to the N3135 regulator instead of the factory-attached cap shown in Figure 1.

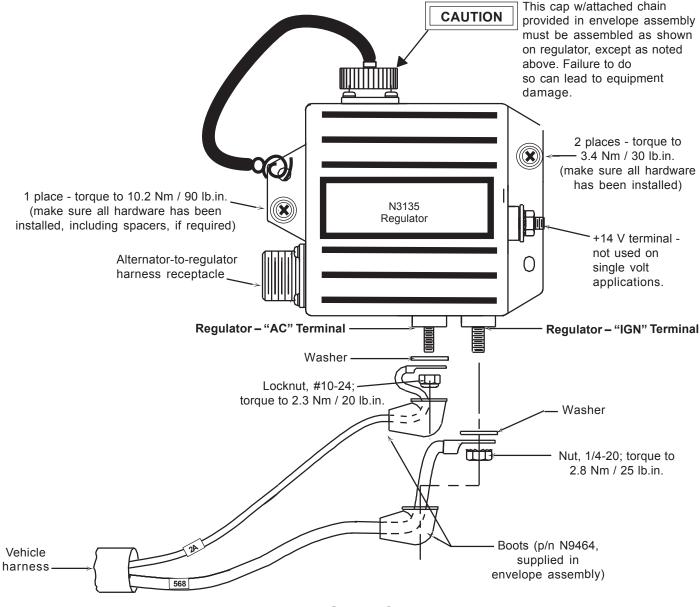


FIGURE 1

II0028D Page 1 of 2

## N3135 Regulator in **Dual Voltage** (28 V/14 V) Applications MAKE CONNECTIONS AS SHOWN BELOW IN FIGURE 2:

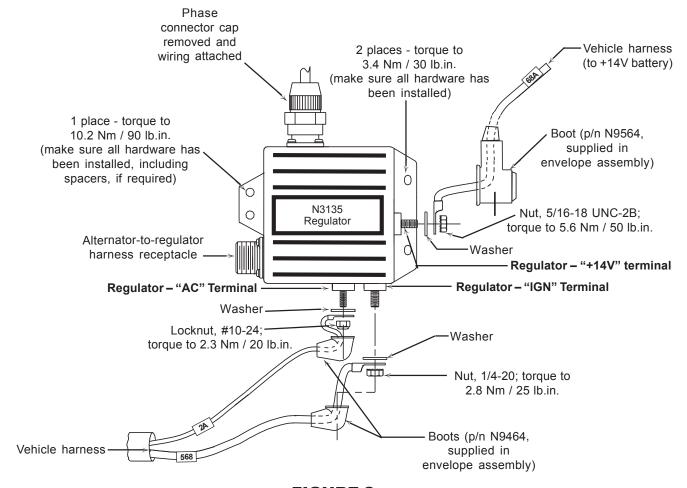


FIGURE 2

Page 2 of 2 II0028D