



How to Use Pulley Tool

1. Install pulley on alternator shaft. Fasten with hardened washer and pulley nut.
2. Place pulley nut torque tool on top of pulley and snugly fasten hardware sized specifically for the holes in the pulley.
3. Hold pulley tool in position with breaker bar.
4. Tighten pulley nut to torque specified by alternator model number.
5. Remove hardware and pulley tool after pulley nut is tightened.

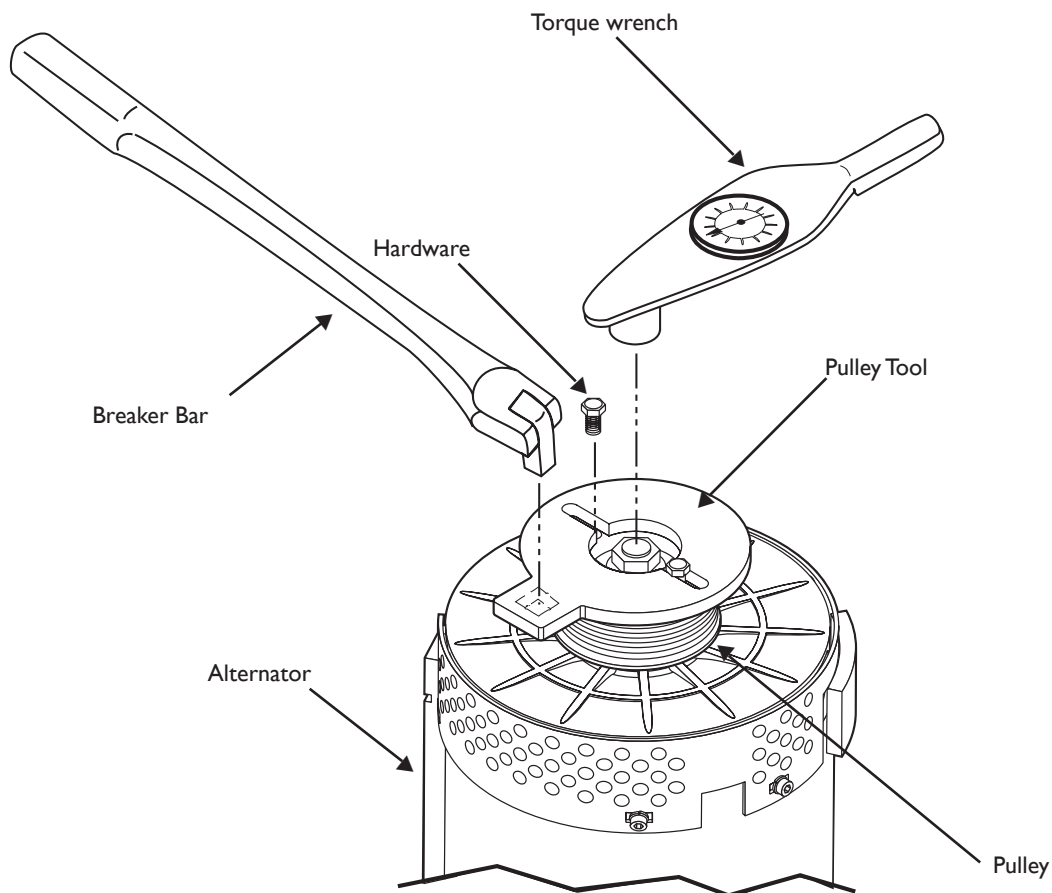


Figure 1 — Pulley Tool